



Usermanual

i-Bike.SE



RFE International Ltd

The Performance Centre
Maidstone Road, Kingston
Milton Keynes MK10 0BD
+44 (0) 1908 793 020
info@rfeinternational.com

Customer Support

0800 440 2459
techsupport@rfeinternational.com

reebokfitness.info

Reebok

Reebok

Welcome from Reebok Fitness

Thank you for choosing Reebok. Before you get started, please read these instructions carefully. If you experience any difficulties, our support team will be happy to help – or check out our website at **reebokfitness.info**

Important note:

Consult your doctor before starting any exercise programme. If you feel any sickness, chest pain, dizziness or breathlessness during your training, stop exercising and consult your doctor immediately.

If you have any further queries please contact our customer support team on the details provided either at the foot of this page or on the back of the manual.



Customer Support

0800 440 2459

techsupport@rfeinternational.com

Reebok

Contents

Reebok i-Bike.SE

01

reebokfitness.info

Parts	02
Assembly	04
Precautions	12
Functions	14
Correct Use	15
Warm Up	16
Computer	17
Maintenance	24
Troubleshooting	26
Parts ID	28
Limited Warranty	32

Model name: Reebok i-Bike.SE

Serial number:



These details can be found on the underside of your product.

Parts


Reebok i-Bike.SE

Customer Support 0800 440 2459

02

Checking The Parts

Before you begin, please check all parts are present and undamaged. If you are missing any parts, please call our Technical Support team on the number at the top of this page.

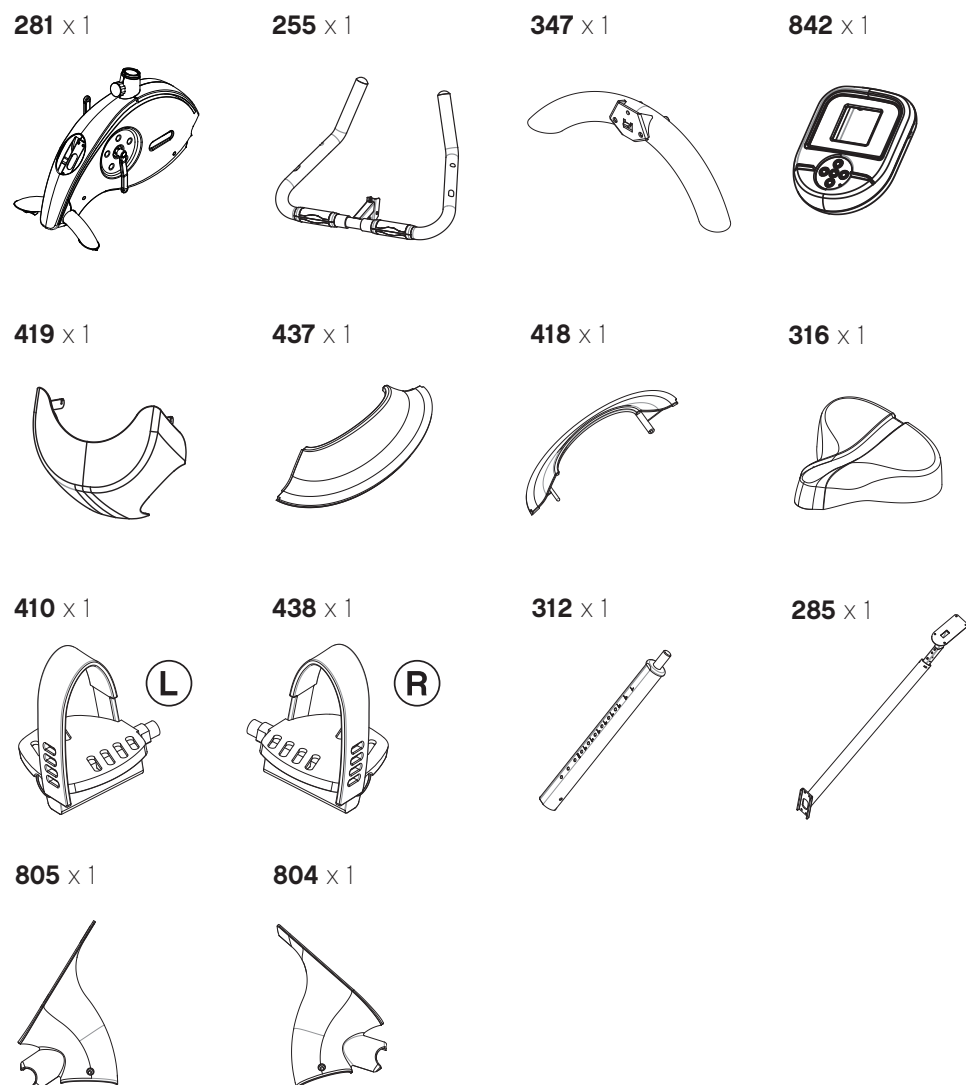

Reebok i-Bike.SE

reebokfitness.info

03

Blister Pack

215 x 5
M8x20mm



807 x 7
8mm



373 x 5
8mm



541 x 1
M5x29mm



219 x 2
M6x50mm




220 x 2
6mm




211 x 2
M4x10mm




A x 1
4mm



B x 1
5mm

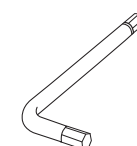

C x 1
6mm

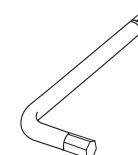


D x 1



E x 1



F x 1

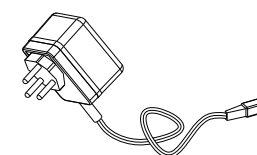

Assembly

Reebok i-Bike.SE



Customer Support 0800 440 2459

04

Stabiliser

1. Remove the bike from the box.
2. Remove the transport stabiliser, located at the back of the product. These bolts are 2 x 854 .
3. There are three holes in the rear stabiliser (347). Attach the rear stabiliser to the main frame, as shown, by fixing 2 x 854 bolts and 2 x 807 spring washers into the bottom two holes.
4. Now fix the rear stabiliser by inserting 1 x 215 bolt in the top hole, along with 1 x 807 spring washer and 1 x 373 flat washer.

You will require:

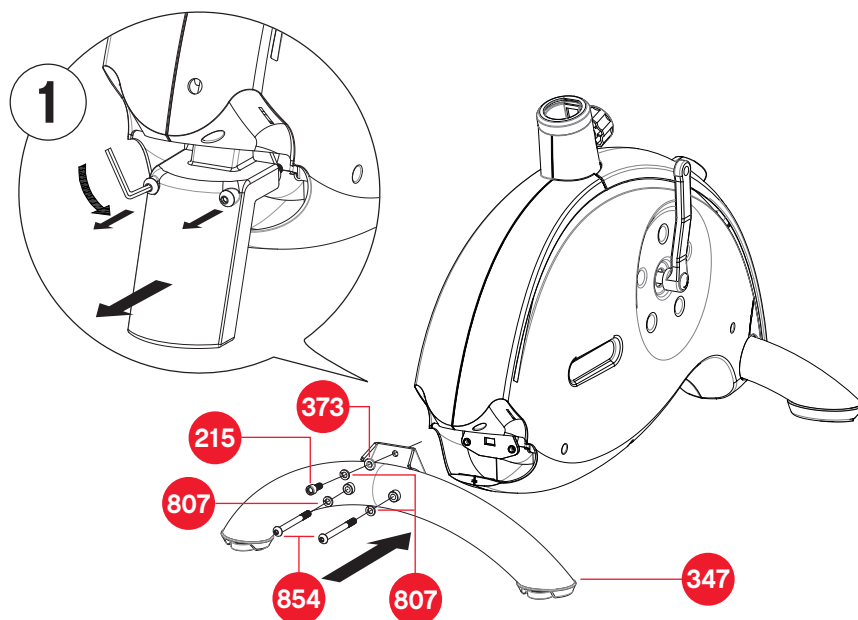

To aid access to the bolt holes during assembly, it may help to place the bike body on a piece of polystyrene packaging.

Reebok i-Bike.SE

reebokfitness.info


05

5. Once complete, clip the plastic cover (419) over the stabiliser.

You will require:



419 x 1

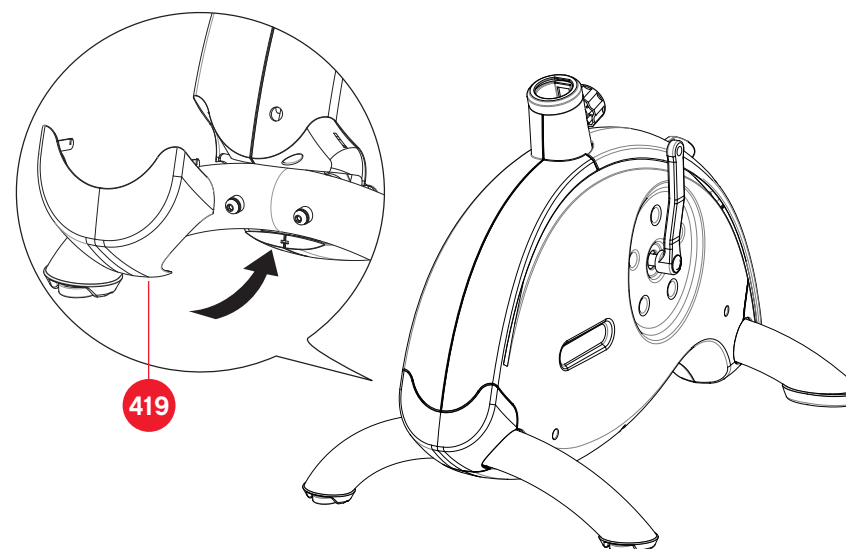

Assembly

Reebok i-Bike.SE



Customer Support 0800 440 2459

06

Saddle/Pedals

6. Attach the saddle (316) to the saddle stem (312) using the bolt which is already in place. Insert the saddle stem into the main body by unscrewing the adjustment knob a couple of turns and pulling it out.
7. Slot the pedal straps on the pedals as marked L and R for left and right.
 The side of the pedal strap with more slots should go on outside of pedal to allow ease of adjustment at a later date.
8. Attach the right pedal (438) onto the right pedal shaft and tighten with the spanner.
 The right pedal is marked with an R and should be threaded onto the crank in a CLOCKWISE direction.
9. Attach the left pedal (410) onto the left pedal shaft and tighten with the spanner.
 The left pedal is marked with an L and should be threaded onto the crank in a COUNTERCLOCKWISE direction.

You will require:

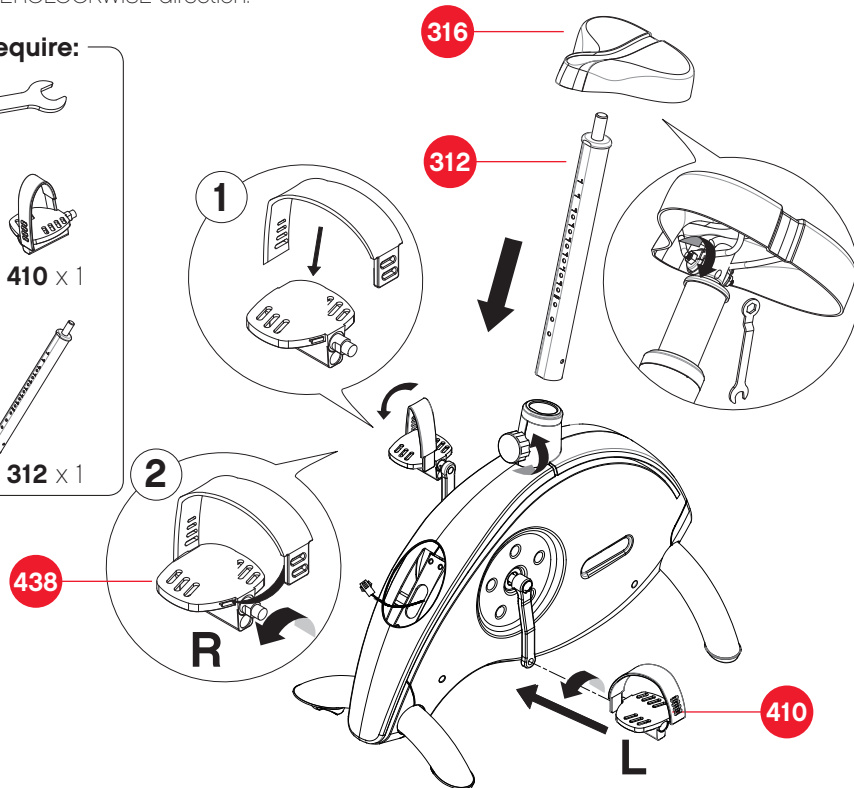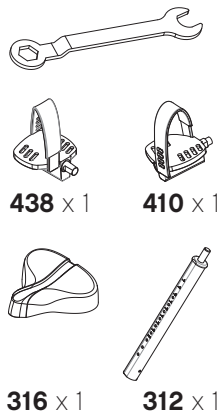

Reebok i-Bike.SE


reebokfitness.info

07

Upright

10. Clip the wires at the bottom of the upright (285), to the pre assembled wires sticking out at the front of the bike (fig.1).
 You will hear a click, which will confirm those wires are connected together.
11. Fix the upright to the main body of the bike using 4 x 215 bolts, 4 x 807 spring washers and 4 x 373 flat washers (fig.2).
 For ease, place the upright (285) over fixing plate. Insert and finger tighten 1 x 215/807/373. You can now tighten each bolt individually.

You will require:

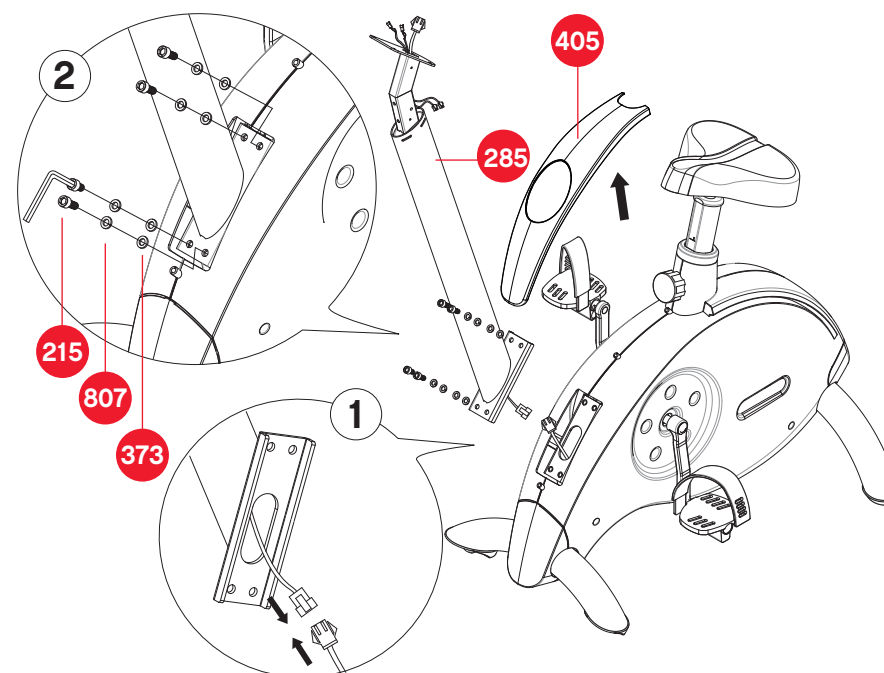

Assembly

Reebok i-Bike.SE


Customer Support 0800 440 2459

08

Upright Covers

12. Clip the upright covers onto the base of the uprights as shown.

You will require:

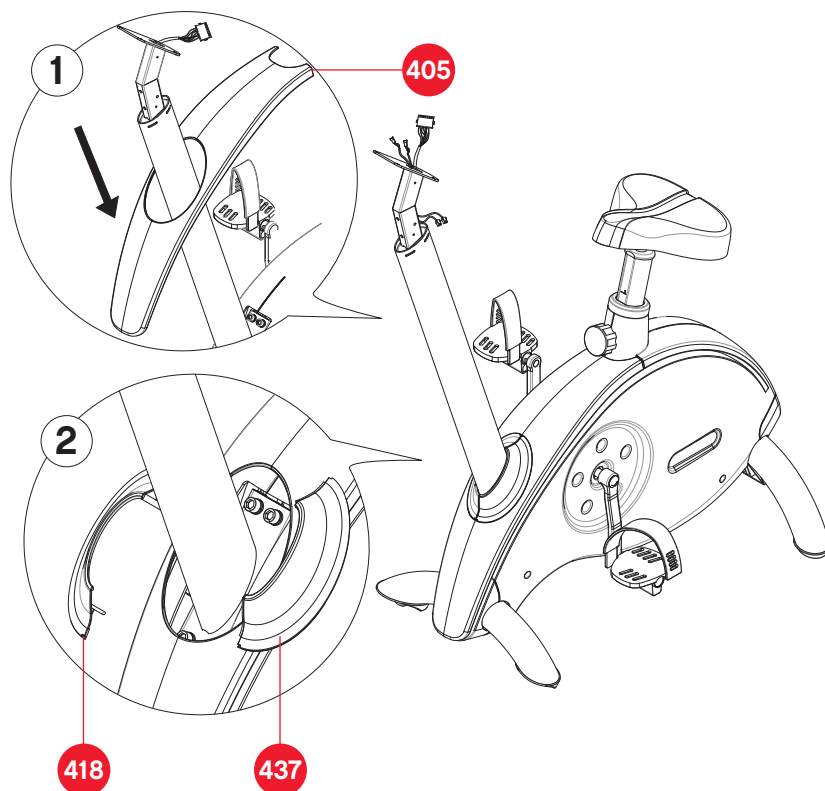

Reebok i-Bike.SE



reebokfitness.info

09

Handlebars

13. Insert the two wires from the back of the handlebars (255) to the pre mounted wires in the upright (fig.1).
14. Pull wires through to mount the handlebars on the stem.
15. Fix the handlebar to the upright using 2 x 220 spring washers and 2 x 219 bolts. These insert from the front of the bike back towards the saddle (fig.2). Ensure the wires do not get crushed by pushing them back into the upright.
16. Now insert 1 x 541 bolts into the sides of the handlebar bracket, to secure it to the upright.

You will require:

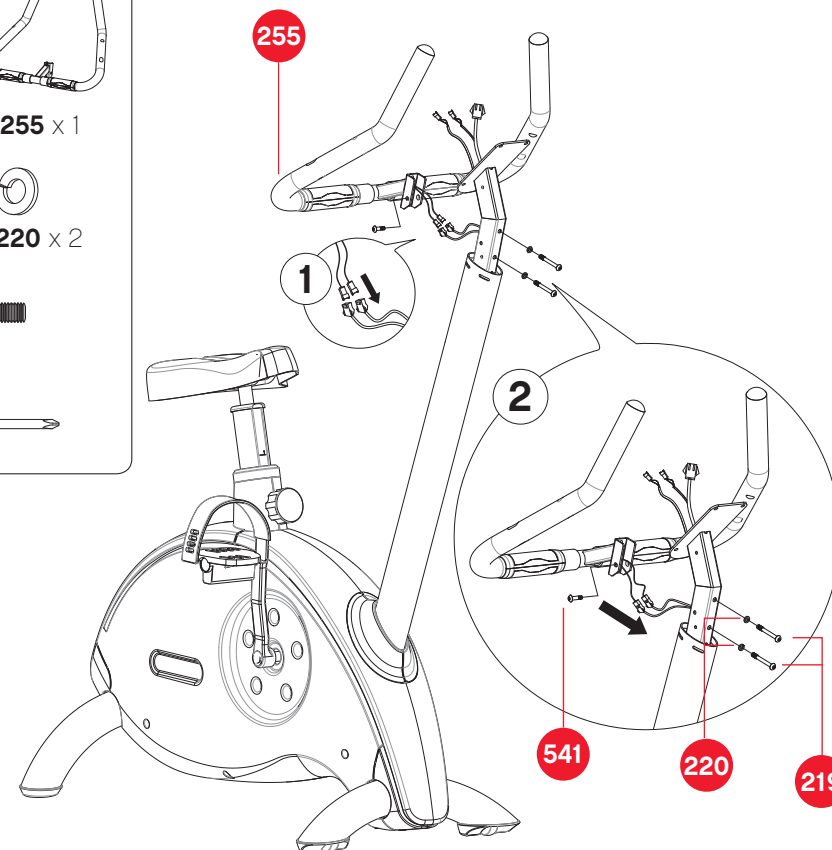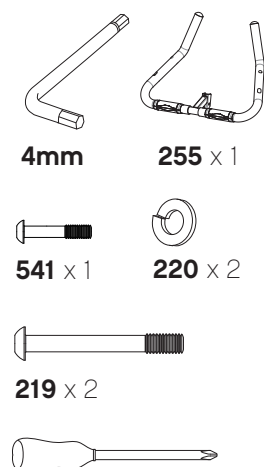

Assembly

Reebok i-Bike.SE

Customer Support 0800 440 2459

10

Console & Console Covers



17. Connect the console (842) wires to the wires in the top of the upright (fig.1).

 You will hear a click to confirm these have connected.


18. Screw the console to the console plate using 4 x 321 screws (located in the back of the console).

19. Clip the console covers (804 and 805) over the handlebars, and secure using 2 x 211 screws (fig.2).

You will require:

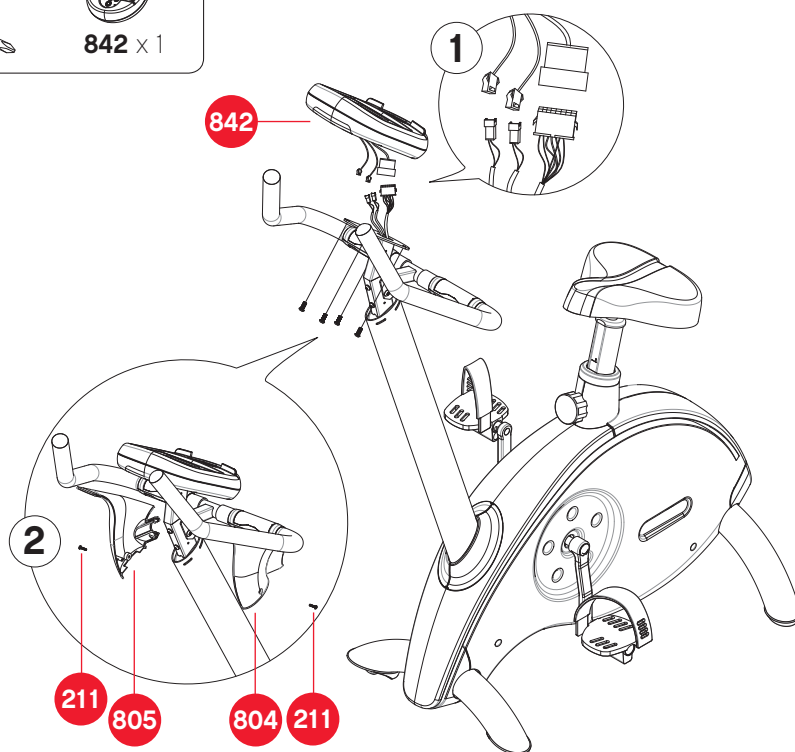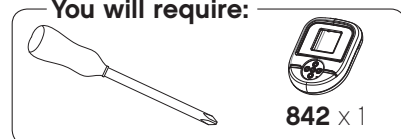

You will require:

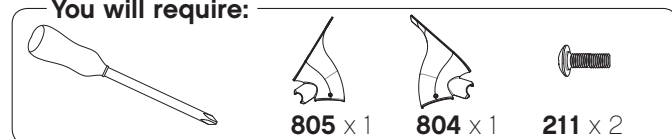


11

Reebok i-Bike.SE

reebokfitness.info

Adjustable Feet

20. There are adjustable feet in the rear stabiliser. These can be screwed in or out to accommodate minor level imbalances.

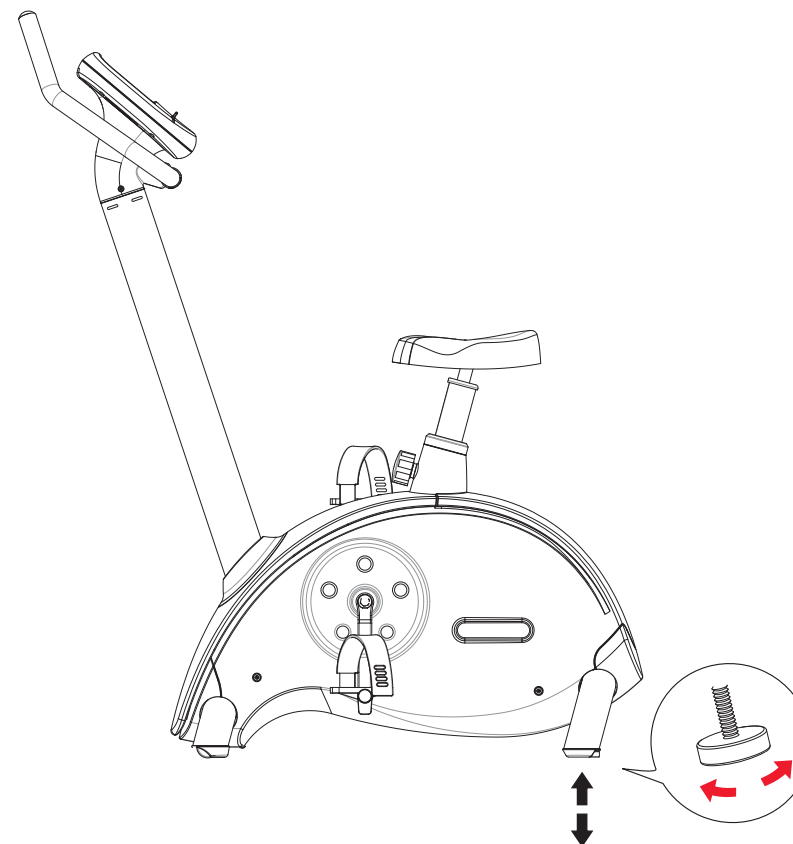



Precautions

12

Reebok i-Bike.SE

Customer Support 0800 440 2459

These instructions are intended to provide important information for use and maintenance of the equipment as well as for your personal safety. Keep this user manual in a safe place for future reference.

WARNING!

This product is made for home use only and tested up to a maximum body weight of 120kg.

RFE International Ltd. assumes no responsibility for personal injury or property damage sustained by or through the use of this equipment. It is the responsibility of the owner to ensure that all users of this equipment are adequately informed of all warnings and precautions.

SCOPE

- Maximum user weight of 120kg.
- This product is designed for physical exercise by adults. This product is not suitable for use by persons under 14 years of age.
- Never allow more than one person on the equipment at a time.

ENVIRONMENT

- Ensure that those present are aware of possible hazards e.g. moveable parts during training.
- Ensure that sufficient space is available to use the product.
- Please ensure that liquids or perspiration are wiped off the product.
- This product is designed to be used and stored indoors. Do not store the product outside, or in damp/dusty environments.
- The product is made for home use only. Warranty and manufacturer's liability do not extend to any product or damage to the product caused by commercial use.

13

Reebok i-Bike.SE

reebokfitness.info

USER HEALTH

- Consult your doctor before starting any exercise programme to receive advice on the optimal training.
- Ensure the product is on a flat, level surface with at least 0.5m of clear area surrounding the product.
- Incorrect/excessive training can cause health injuries.
- If you feel sickness, chest pain, fits of dizziness or breathlessness during your training, immediately stop the training and consult your doctor.

PRODUCT PREPARATION

- Ensure that training only starts after correct assembly, adjustment and inspection of the product.
- Follow the steps of the assembly instructions carefully.
- Only use suitable tools for assembly and ask for assistance if necessary.
- Only use original Reebok parts as delivered (see checklist).

SAFETY CHECKS (Before Every Use)

- Tighten all adjustable parts to prevent sudden movement while training.
- Tighten all nuts and bolts.
- Check that the tension knob is secure.
- Ensure the product is on a flat, level surface.
- Do not use the product without shoes or with loose shoes.
- Be aware of non-fixed or moving parts whilst mounting or dismounting the product.
- Do not wear loose or poorly fitting clothing that may become trapped in the product.

Functions

Reebok i-Bike.SE

Customer Support 0800 440 2459

14

Correct Use

Reebok i-Bike.SE


reebokfitness.info

15

We recommend you use your bike in the following way:



Transport

1. Tilt the bike forward, onto the front stabiliser.
2. Wheel the bike into position.
3. Lower the bike until all feet are flat on the floor.

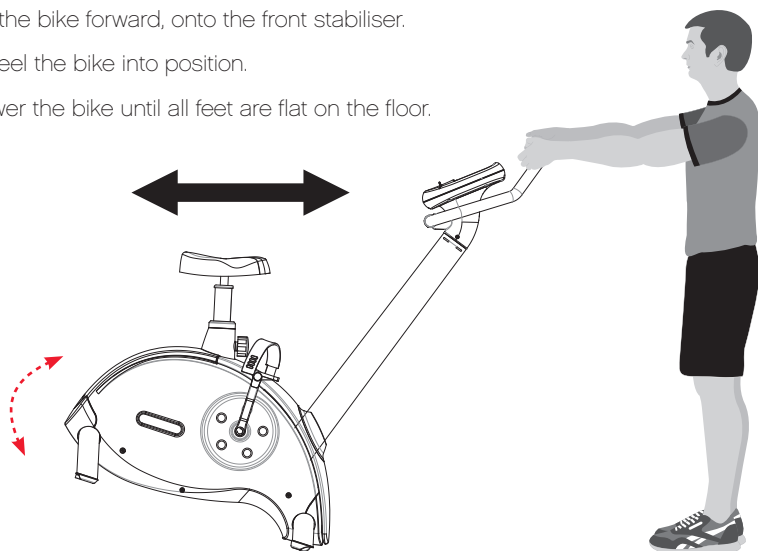

Adjust the seat height

1. Undo the seat adjustment knob and pull to release the locating pin.
2. Move the seat up or down as required.
3. Release the adjustment knob to relocate the pin.
4. An audible click will confirm the seat is locked into place.
5. Retighten the adjustment knob.

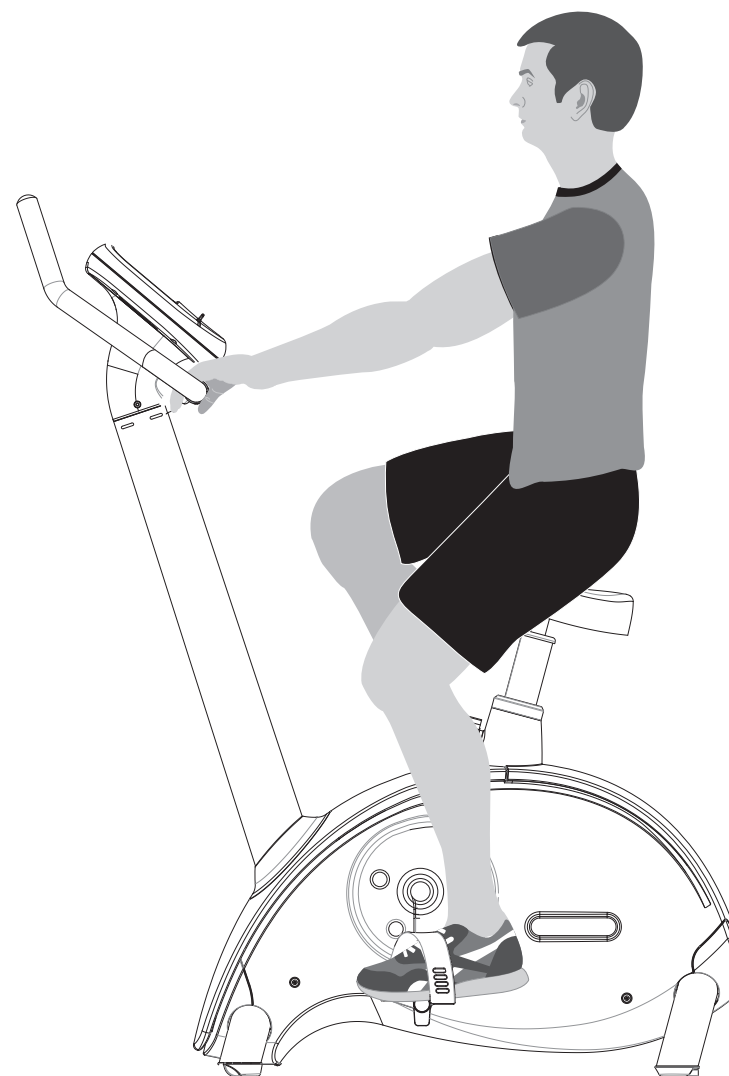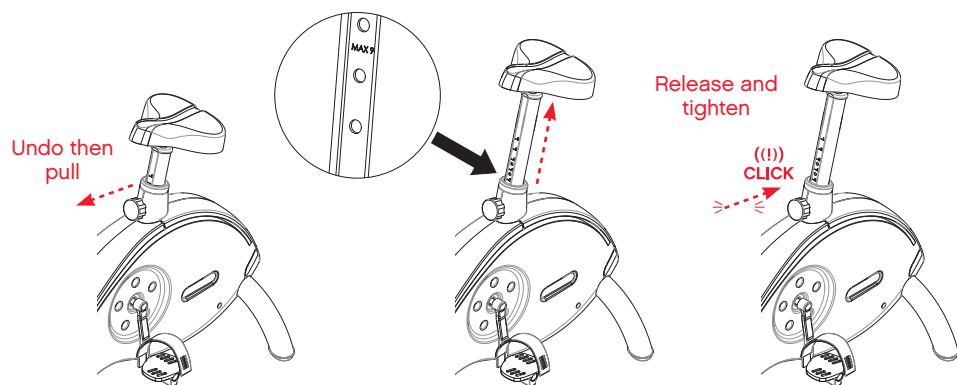

Warm Up

Reebok i-Bike.SE

16

Customer Support 0800 440 2459


Warming Up

It is important to warm up before exercising to prepare your body for the workout it is about to do. The first phase of a warm up is to increase your heart rate and get blood pumping around your body faster. Choose an activity which will warm up the same muscles you are going to use during your workout.

1. 5-10 minutes heart rate raising activity
2. Static stretching
3. Workout

Stretches

Hold each stretch for about 30 seconds. Stretching should not hurt; only stretch your muscles to as far as is comfortable. If you have a tight or previously injured muscle stretch the affected muscle group within the warm up. Do not perform any sudden movements while warming up.

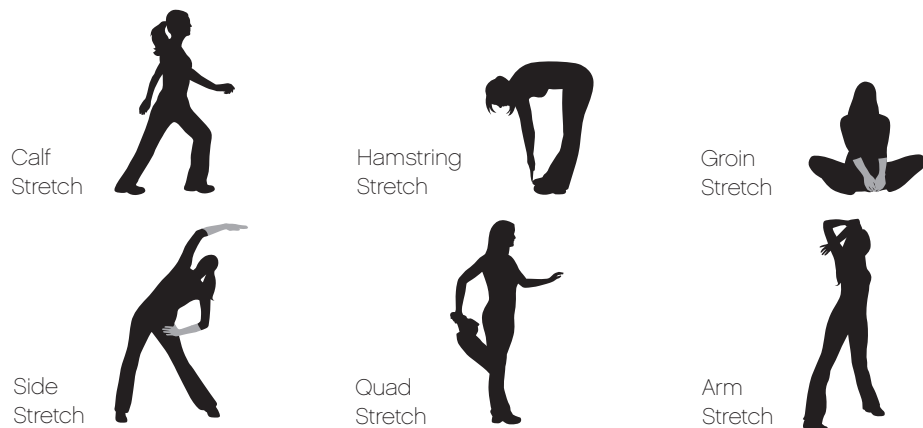

Cool Down

Following your workout you should carry out a cool down.

This should gradually bring your heart rate back to a resting level. To do a cool down perform an activity of your choice at a low intensity e.g. a steady 5 minute cycle. This should be followed by static stretches, similar to those in the warm up. Again, hold each stretch for 30 seconds.


Computer

Reebok i-Bike.SE

17

reebokfitness.info

Computer Functions:

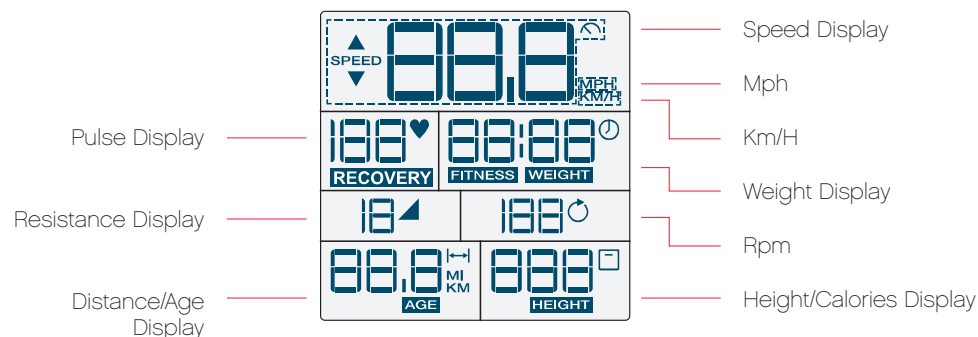

WARNING!

The console requires to use the adaptor and plug in the adaptor in the lower of chain cover.

Preset Programmes

Your i-Bike.SE has 6 preset programmes:

• Target Time Programme

A programme where you can workout for a set amount of time.

• Target Distance Programme

A programme where you can workout for a set distance.

• Target Calories Programme

A programme where you can workout until you have burnt a set number of calories.

• Interval Programme

A programme where you can workout at various speeds and resistances.

• Endurance Programme

A programme where you can workout for a given time or distance over varied, pre programmed resistances.

• 20 Minute Fitness Test

A programme where you can assess your current fitness level.

Quick start

To exercise without any preset programme:

Turn the power to the bike on. Press  and begin pedalling immediately. The console will record your distance, calories and time (counting up).


 All programmes can be overridden at any time by pressing .

WARNING!

Failure to start pedalling within 30 seconds of pressing the  button will result in the programme stopping. The console will enter standby mode 3 minutes later if no activity is detected in this time.




Target Time Programme

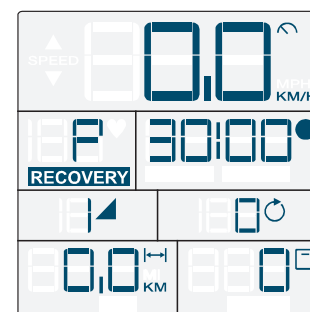

1. Having turned the power on, press  once.
2. The time will be flashing on the screen (the default is 30.00 minutes).
3. Adjust this time using the buttons  and , press  to confirm setting.
4. Press  to begin your workout.

 At the end of the programme, a long beep will sound. Your workout data will then be displayed for 30 seconds before the console returns to its original screen.


Target Distance Programme

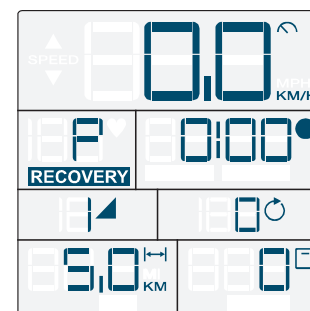

1. Having turned the power on, press  to select P2, and press  enter into program.
2. The distance will be flashing on the screen (the default is 5.0km or 3.2 miles).
3. Adjust this distance using the buttons  and , press  to confirm setting.
4. Press  to begin your workout.

 You can press and hold the buttons  or  to adjust the target distance more quickly.


Target Calories Programme

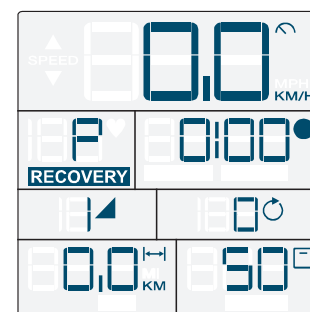

1. Having turned the power on, press  to select P3, and press  enter into program.
2. The target calories will be flashing on the screen (the default is 50 calories).
3. Adjust the target calories using the buttons  and , press  to confirm setting.
4. Press  to begin your workout.

 You can press and hold the buttons  or  to adjust the target calories more quickly.


Interval Programme

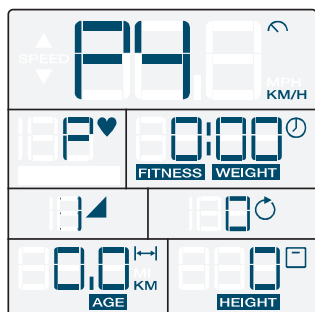

1. Having turned the power on, press to select P4, and press to enter into program.
2. L1 will appear on the screen. This is the resistance level. Use or to adjust the resistance between Level 1 (L1) and level 8 (L8). Press to confirm your choice.
3. Now, the default time of 30.00 minutes will appear on the screen. Press or to adjust the duration of your workout. Press to confirm your choice.
4. Press to begin your workout.


You can adjust the resistance level during the interval programme by pressing the or buttons.

Endurance Programme

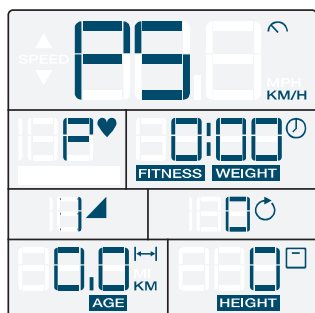

1. Having turned the power on, press to select P5, and press to enter into program.
2. L1 will appear on the screen. This is the resistance level. Use or to adjust the resistance between Level 1 (L1) and level 8 (L8). Press to confirm your choice.
3. Now, the default time of 30.00 minutes will appear on the screen. Press or to adjust the duration of your workout. Press to confirm your choice.
4. Press to begin your workout.

You can adjust the resistance level during the endurance programme by pressing the or buttons.

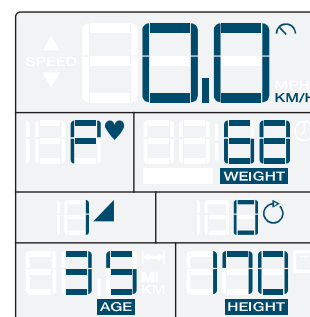

20 Minute Fitness Test Programme

The fitness test programme assesses your ability to work to a target heart rate. At the end of the session you will be graded between 1 and 6. It is recommended you only progress your fitness test difficulty level when you have achieved an excellent (F1) score in the difficulty level below.

In order to complete the fitness test programme, the computer needs to know your height, weight, age and target heart rate:

1. Press the button.
2. The weight value will be flashing on the console (factory default is 68kg or 150lb). Press or to adjust this value, and use to confirm your choice.
3. The default height of 170cm or 67 inches will be flashing now. Use the and buttons to adjust this value to your height. Press to confirm your choice.
4. The default age of 35 will be flashing now. Again, press or to adjust this value to your age. Press to confirm your choice.

The computer will now calculate your heart rate range during exercise (65% of your maximum heart rate). E.g. for a 35 year old person, the target heart rate would be $(220-35) \times 65\% = 120$ beats per minute. The programme is designed to make you work at a heart rate of 115 to 125bpm.

5. Press to begin your fitness test programme.

You must grip the hand pulse sensors for the duration of your workout on the fitness test programme.

Computer

22

Reebok i-Bike.SE

Customer Support 0800 440 2459

20 Minute Fitness Test Programme continued


When the programme is underway, the computer will guide you to work within your required training zone. If your heart rate is too high, the console will beep twice, and the following screen will be displayed in the speed section:



If your heart rate is below the target zone, the console will beep twice and the speed arrow will point up as follows:



When you are pedalling at an appropriate speed, the screen will appear as follows:

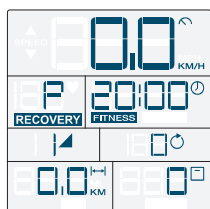

If you hear more than two beeps, you need to change your speed significantly in order to work within the target heart rate zone.


23

Reebok i-Bike.SE

reebokfitness.info

At the end of the programme, a 1 minute recovery programme will begin. It is important to keep your hands on the pulse sensors throughout this minute so the computer can measure your recovery. During this time you should notice your heart rate falling.

At the end of the recovery minute your score will be displayed in the top section:

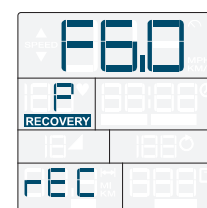

- F1 Excellent
- F2 Very Good
- F3 Good
- F4 Satisfactory
- F5 Below Average
- F6 Poor
- Fx.x Failure to hold pulse sensors throughout recovery period

Maintenance

Reebok i-Bike.SE

Customer Support 0800 440 2459

24

Proper maintenance is very important to ensure your equipment is always in top working condition. Improper maintenance could cause damage or shorten the life of your equipment as well as exceeding the warranty coverage.

1. Inspect and tighten all parts of the equipment regularly:
 - Any worn parts must be replaced immediately.
 - Pay particular attention to nuts, bolts, screws and washers.
2. For continued smooth operation ensure the front and rear stabilisers are fully tightened and kept clean and free from any residue like perspiration or dust.
3. To ensure all components of the equipment, including the frame, are in a good condition please ensure any perspiration or dust is wiped clean on a regular basis using a soft, damp cloth.
4. Please don't use abrasives or solvents as this may affect the colouring or operation of the components.
5. Check the pedals/footplates are fully tightened before each use.
6. Keep the equipment out of direct sunlight at all times.



reebokfitness.info

Reetrain

The Reebok i-Series line is designed to be smart and easy with compact structures, simple assembly and easy-to-use controls.
Product shown: Reebok i-TrainerS in red.

Reebok



Troubleshooting

26

Reebok i-Bike.SE

Customer Support 0800 440 2459

Q My equipment is out of the warranty can you still help me?

A Yes we can still help, we have a large network of engineers that cover 98% of the British Isles and can provide replacement parts. For a quote on parts or engineer call out please contact our Technical Support phone line listed on the back of this manual.

Q Can I keep my equipment in my garage?

A Yes, but not in a garden shed. Note if your equipment is kept in a garage, ensure it is covered and placed on a mat or carpet. It is important to protect it from being exposed to extremes in temperature, heat, humidity and moisture.

Q I have an error message on my screen what does this mean and what can I do?

A There are a number of error messages that may be displayed on your computer. Please see the codes below:

- E1 – No speed signal.
- E2 – The computer can not interface with the computer chip.
- E3 – When analysing the body fat this error will occur if the computer can not read your pulse.
- E5 or ERR-M – This indicates there is a fault with the servo motor.

If you have any of these errors we would advise for you to recheck all the connecting wires in the back of the computer, the front post and the pulse wires coming from the handle bars firstly. If this does not cure the problem please contact us on Technical Support phone line listed on the back of this manual.

Q The console does not display distance, speed or calories.

A Firstly the wiring that was connected during assembly needs to be checked. These are located into the rear of the computer and halfway down the inside of the handlebar tube. These can be disconnected completely then reconnected to reset this function. If the console still does not function properly, please do not hesitate to contact our Technical Support phone line above.

Reebok i-Bike.SE

reebokfitness.info

Q My new bike squeaks, is this normal?

A This is not normal there are some basic checks that we would advise you to perform:

- Please check all nuts and bolts are secure but not over tightened (it may be worth loosening slightly if noise seems to be coming from a specific area).
- Please check that all washers are fitted and in the correct position.
- Please lubricate all moving parts with either WD40 or light grease (grease is the best option).
- Ensure front and rear stabilisers are attached correctly.
- Ensure the front upright post is locked in position with no movement.
- Make sure all bolts are tight.
- Please check pedal/foot plates are fully secure.

If these checks do not help to remedy the fault please don't hesitate to contact us.

Q I can't seem to attach my left pedal?

A Please be aware the left pedal has a reverse thread and will attach in a backward direction. This needs to be threaded onto the crank in a counter clockwise direction.

Q When I press the buttons on my bike it does beep but there is no display on the screen. Do I need a new computer?

A This may be a simple contrast setting please follow the instructions below:


- Remove the power from the machine.
- Insert the power back to the machine.
- Press and hold the "stop" button.
- While holding the "stop" button tap the "up" arrow.
- You will find the screen starts to reappear.
- When you are happy with the screen release all the buttons.

If this does not work please contact our Technical Support phone line listed on the back of this manual.

Diagram 1

IB SE-842 Console Housing Cover – Upper x 1
 IB SE-808 Console Housing Cover – Lower x 1
 IB SE-804 Upright Upper Cover – Left x 1
 IB SE-805 Upright Upper Cover – Right x 1
 IB SE-803 Battery Cover x 1
 IB SE-802 M4x15 Screw x 6
 IB SE-255 Handle Bar x 1
 IB SE-202 Handle Pulse Sensor – Upper x 2
 IB SE-203 Handle Pulse Sensor – Lower x 2
 IB SE-204 Foam Grip x 2
 IB SE-705 Handle Pulse Sensor Wire x 2
 IB SE-206 Handle Bar End Cap x 2
 IB SE-250 Handle Bar Foam Grip – Middle x 2
 IB SE-702 7 Pin Wire-Upper x 1
 IB SE-285 Upright x 1
 IB SE-245 M3.5x16 Screw x 4
 IB SE-213 M5x14 Washer/Screw x 6
 IB SE-215 M8x20 Bolt x 5
 IB SE-286 Speed Sensor x 1
 IB SE-287 Speed Sensor Holder x 1
 IB SE-219 M6x50 Bolt x 2
 IB SE-220 6x10x2 Spring Washer x 2
 IB SE-706 Handle Pulse Sensor Wire – Middle x 2
 IB SE-522 Spring x 1
 IB SE-510 6300 Bearing x 2
 IB SE-519 Tension Pulley Bracket x 1

IB SE-524 M5x14 Screw x 1
 IB SE-541 M5x29 Screw x 1
 IB SE-211 M4x10 Screw x 2
 IB SE-854 M8x85 Bolt x 2
 IB SE-373 8x17x1.5 Washer x 5
 IB SE-351 Rear Stabilizer Tube Adjustment Foot x 2
 IB SE-347 Rear Stabilizer Tube x 1
 IB SE-307 Rear Stabilizer Tube Foot Cover – Right x 1
 IB SE-342 Rear Stabilizer Tube Foot Cover – Left x 1
 IB SE-309 Front Stabiliser Tube Transport Cover – Left x 1
 IB SE-341 Front Stabiliser Tube Transport Cover – Right x 1
 IB SE-311 Transport Wheel x 2
 IB SE-312 Saddle Post x 1
 IB SE-326 Saddle Post Plastic Insert x 1
 IB SE-323 Seat Post Height Adjustment Knob x 1
 IB SE-703 7 Pin Wire – Lower x 1
 IB SE-316 Saddle x 1
 IB SE-281 Main Frame x 1
 IB SE-318 M6 Spring x 2
 IB SE-319 Transport Fit Bolt M6x35x10 x 2
 IB SE-321 M5x14 Screw x 8
 IB SE-338 M8 Nut x 1
 IB SE-807 8x14x2 Spring Washer x 7
 IB SE-801 Overlay x 1
 IB SE-818 Button Overlay x 1

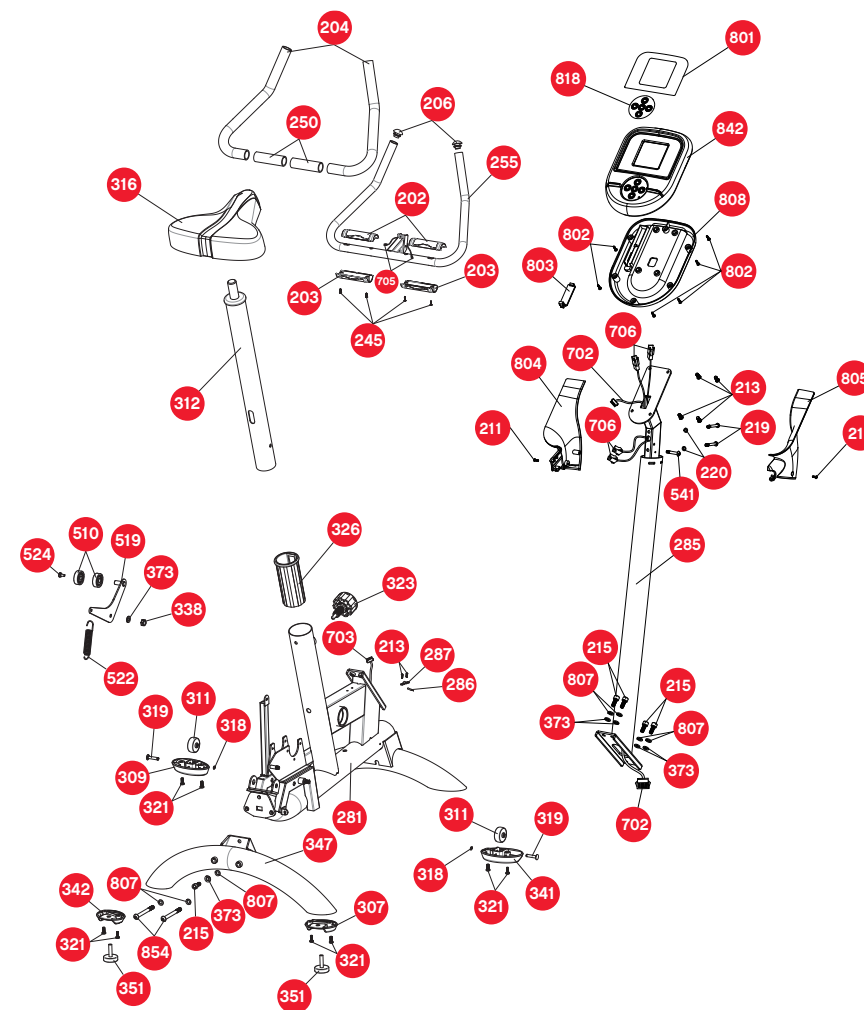

Parts ID

Reebok i-Bike.SE

Customer Support 0800 440 2459

30

Diagram 2

IB SE-558 6004 Bearing x 2
IB SE-501 M18 Nut x 2
IB SE-503 20x30x2 Washer x 1
IB SE-504 Driving Belt Large Plastic Pulley x 1
IB SE-505 Driving Belt x 1
IB SE-506 Crank Shaft 20x208 x 1
IB SE-544 M6x10 Screw x 4
IB SE-540 M6x12 Screw x 6
IB SE-509 M8x14 Screw x 1
IB SE-511 8x23x2 Washer x 1
IB SE-513 ID35xOD192x35.5 Flywheel x 1
IB SE-514 OD255x3 Aluminium Disc x 1
IB SE-126 M8x15 Screw x 4
IB SE-516 Small Pulley OD28x84.3 x 1
IB SE-529 172x22.2x1.5 Washer x 4

IB SE-422 M10 Nut x 1
IB SE-526 Aluminum Disc OD75x11.5 x 2
IB SE-527 ID18xOD35x12 One Way Bearing x 1
IB SE-528 6003 Bearing x 4
IB SE-539 M10x78 Bolt x 1
IB SE-807 8x14x2 Spring Washer x 4
IB SE-631 Motor x 1
IB SE-373 8x17x1.5 Washer x 5
IB SE-338 M8 Screw x 1
IB SE-618 Magnet braket x 1
IB SE-601 10x26x2 Washer x 1
IB SE-602 Spring x 1
IB SE-604 M6 Nut x 1
IB SE-605 M6x70 Bolt x 1
IB SE-608 M6 Nut x 1

Reebok i-Bike.SE

reebokfitnessinfo

31

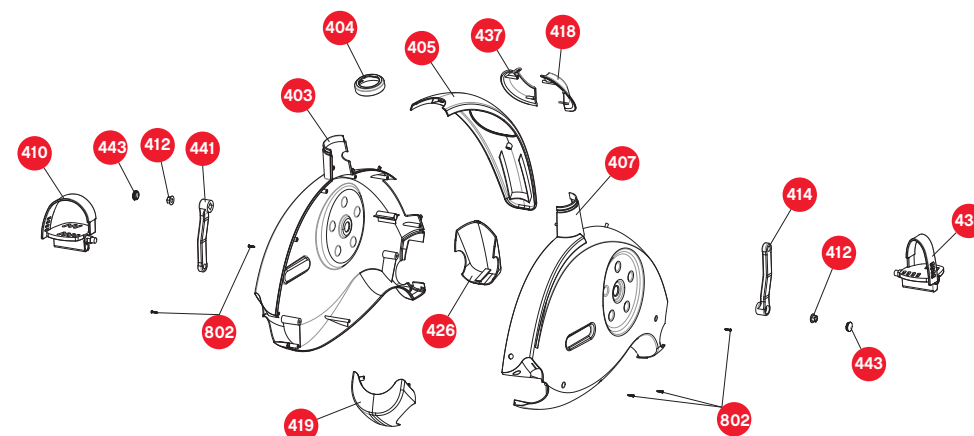
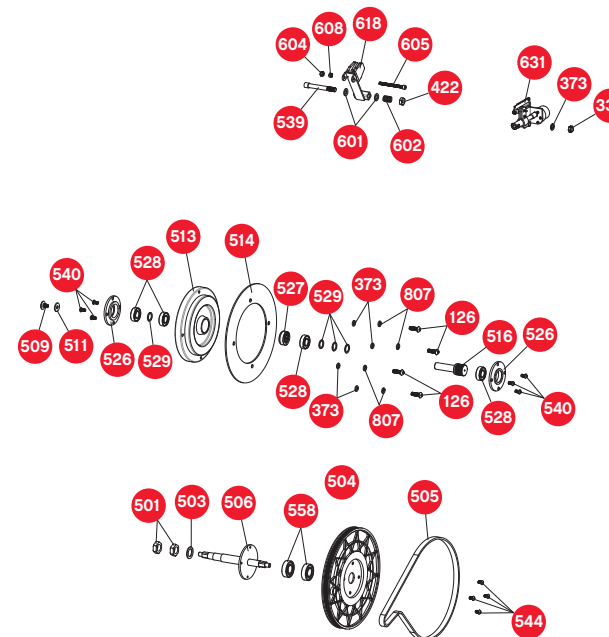


Diagram 3

IB SE-802 M4x15 Screw x 5
IB SE-403 Main Chain Cover – left x 1
IB SE-404 Saddle Post Cover x 1
IB SE-405 Chain Cover Upper Cover x 1
IB SE-407 Main Chain Cover – Right x 1
IB SE-410 Pedal – Left x 1
IB SE-443 Crank End Cap x 2
IB SE-412 M10x1.25 Nut x 2

IB SE-441 Crank – Left x 1
IB SE-414 Crank – Right x 1
IB SE-438 Pedal – Right x 1
IB SE-437 Upright Lower Cover – Left x 1
IB SE-418 Upright Lower Cover – Right x 1
IB SE-426 Front Stabiliser Tube Cover x 1
IB SE-419 Rear Stabiliser Tube Cover x 1

Limited Warranty

Reebok i-Bike.SE

Customer Support 0800 440 2459

RFE International Ltd warrants products to be free from defective workmanship and materials, under normal use and service conditions, for the period of 2 years from the date of purchase. Details of these service conditions can be found within the product's user manual.

In order to validate warranty dates, a proof of purchase is required. This warranty only extends to the original purchaser and will only be covered in the country the machine was purchased.

RFE's obligation under this warranty is limited to replacing or repairing, at RFE's discretion, the product through one of its authorised service centres. All repairs for which warranty claims are made must be pre-authorised by RFE.

This warranty does not extend to any defect caused by abuse, misuse, additions, modifications or repairs not provided by an RFE authorised service centre.

Products used for commercial or rental purposes and/or used as store display models are not covered by this warranty. This product is designed for home use.

No other warranty beyond that specifically set forth above is authorised by RFE.

RFE is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature.

We advise that your product is kept in a room with a constant environment; preventing your product from being exposed to extremes in temperature, heat, humidity and moisture. Guidance on the correct storage of equipment is contained within the product's user manual.

PLEASE RETAIN YOUR RECEIPT AS PROOF OF PURCHASE.

Your statutory rights remain unaffected.

Reecycle

Reebok products are recyclable. At the end of its useful life please dispose of this Reebok product correctly and safely at a local refuse site.



CE RoHS

32

i.series range

reebokfitness.info



For more information visit
www.reebokfitness.info

Reebok